RadioShack®

Cat. No. 44-626

Cassette Repair Kit

Your RadioShack Cassette Repair Kit has all the parts of a standard cassette, except the tape. To repair the cassette, you simply move the tape from the damaged cassette into the new cassette.

You also need these tools and supplies:

- Small Phillips and standard screwdrivers
- Splicing tape and a cassette tape editing/splicing block (available from your local RadioShack store)
- A pair of tweezers (for handling the tape)

PROCEDURE

1. Remove the five screws from the Cassette Repair Kit and carefully lift off the top half of the case, leaving all components in the bottom half in place.
2. Separate the two halves of the damaged cassette.

   If the cassette is held together with screws, simply remove them and carefully lift off the top half of the case.

   If the cassette is sealed without screws, use a small screwdriver to split the case.

   Caution: ***Do this with extreme care.*** Do not insert the screwdriver into the case more than 1/8 inch, or you might cut the tape or damage other parts. Be especially careful when splitting the front edge of the cassette.

3. If the tape is broken, splice the ends together, following the instructions included with the tape splicer. If the tape is jammed or twisted, cut away the damaged tape, then splice the good ends together.
4. The Cassette Repair Kit includes two hubs with about 27 inches of leader tape connected between them. If the damaged cassette has problems associated with the hub and leader assembly, cut the supplied leader and splice the tape to the leader ends.

   If you do not need the hubs and leader, discard them.
5. Install the old tape into the new case. For easy handling, wind all the tape on one hub first. (Hint: To prevent unwinding, temporarily place a piece of splicing tape across the side of the tape on the reel.)
6. Position the tape around the plastic stationary pins and rollers, just inside the lip of the case and in front of the pressure pad.

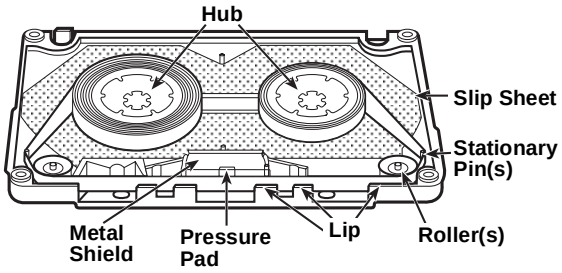

7. If the metal shield or pressure pad has been dislodged, reposition it. The metal shield fits in the groove in the case and the pressure pad must be positioned so its bent ends rest against the small plastic pins.

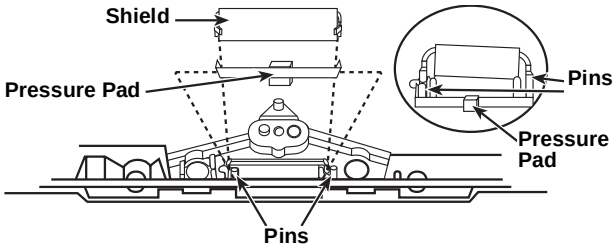

8. Recheck tape positioning and the placement of the metal shield and pressure pad, adjusting as needed. Then place the top slip sheet over the tape and hub assembly with its dull, black-coated side facing the hubs.
9. Carefully position the top half of the case over the assembly, taking care to keep the tape inside the cassette without pinching it between the two halves.
10. Replace the five screws and tighten them securely.

© 1997 Tandy Corporation.
All Rights Reserved.
RadioShack is a registered trademark used by Tandy Corporation.

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

12/97

Printed in the USA

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

12/97

Printed in the USA

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell *3/97*

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

12/97 Printed in the USA